

# KWIKLOK

## Quick Connects

BY WESTERN ENTERPRISES



# WESTERN

a Scott Fetzer company

Global Gas Management Technology

Enterprises | Innovator | Medica | Westwinds

## OSHA - Compliant Quick Connect Sets

Western's Kwiklok Quick Connects are designed with a rotational sleeve locking ring that prevents accidental separation or a straight pull without rotary motion.

- Complies with OSHA Requirements\* – cannot be disconnected by means of a straight pull without rotary motion
- UL Listed and 100% Tested for safety and reliability
- Color-Coded for Fuel Gas, Oxygen and Inert gases
- Demand Valve prevents gas flow when disconnected
- Reverse Flow Check Valves in oxygen and fuel gas models
- Non-interchangeable connections prevent gas mixing
- Durable brass construction for long service life
- Packaged for Retail Display
- Designed for Shipyards, Oil Platforms, Metal Fabrication, Construction and other OSHA inspected facilities

### HOW TO ORDER


Item #	Description
QDB40	Torch to Hose Set (Oxy/Fuel), 9/16"-18 UNF <sup>1</sup>
QDB50	Hose to Hose Set (Oxy/Fuel), 9/16"-18 UNF <sup>1</sup>
QDB60	Regulator to Hose Set (Oxy/Fuel), 9/16"-18 UNF <sup>1</sup>
QDB73	Inert Hose to Machine Set, 5/8" - 18 RH UNF <sup>1</sup>
QDB74	Inert Hose to Machine Set, 5/8" - 18 RH UNF <sup>1</sup>

<sup>1</sup> **⚠ WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).




Male Plug


Female Socket with Rotational Locking Feature

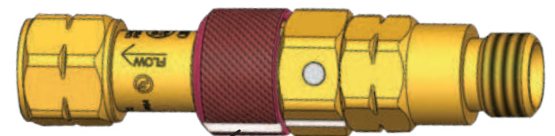

Locking Ring in "Connect" Position

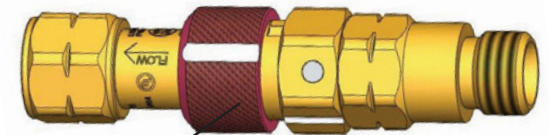

Locking Ring Rotated to Secure Connection

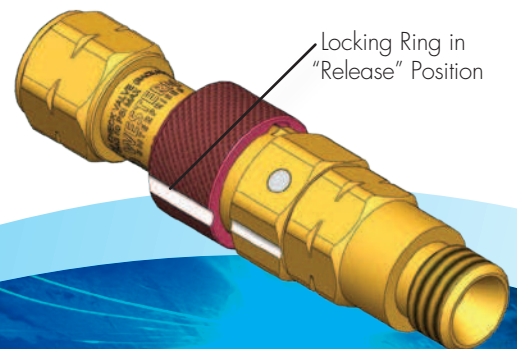

Locking Ring in "Release" Position

# Standard Quick Connects

BY WESTERN ENTERPRISES

Western's Quick Connects provide fast, reliable and positive connections and disconnections for torches, hoses and regulators. All models are color-coded for gas service for added ease of use and safety. Quick Connects fit all B-size welding and cutting equipment.

## STANDARD QUICK CONNECTS FEATURES

- Brass construction provides long service life- cycle tested over 10,000 operations indicating a service life of over 10 years of comparable use.
- Non-interchangeable Oxygen and Fuel Gas connectors prevent accidental gas mixing.
- Instant closure on reverse flow Check Valves with total shutoff at only 10 oz. of back pressure.
- Packaged for Retail Display
- UL Listed and 100% Tested
- Color-Coded for Fuel Gas (Red), Oxygen (Green), and Inert Gases (Blue)

## HOW TO ORDER

Item #	Description
QDB10	Torch to Hose, 9/16" - 18 UNF <sup>1</sup>
QDB20	Hose to Hose, 9/16" - 18 UNF <sup>1</sup>
QDB30	Regulator to Hose, 9/16" - 18 UNF <sup>1</sup>
QDB33	Inert Regulator to Hose, 5/8" - 18 RH UNF <sup>1</sup>
QDB34	Inert Hose to Machine, 5/8" - 18 RH UNF <sup>1</sup>

<sup>1</sup> **⚠ WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



Global Gas Management Technology

Enterprises | Innovator | Medica | Westwinds

Distributed by: