


**BIA-3**  
Remote Audio / Visual Alarm Panel



The Western Innovator BIA-3 remote Audio / Visual alarm is designed to operate with a 24 VAC, 60 Hz power source. The alarm function is initiated on an open circuit. The alarm panel contains Red and Green alarm lights and a buzzer with “squelch” button. The Green light remains illuminated while “service” bank is in use. When “service” bank is exhausted, the green light is extinguished. The red light is lighted and the buzzer, rated 75 decibels within 100 centimeters, is activated to ensure notice of the alarm conditions. A touch of the squelch button silences the buzzer, but the Red alarm light will remain illuminated until the exhausted bank has been replaced.

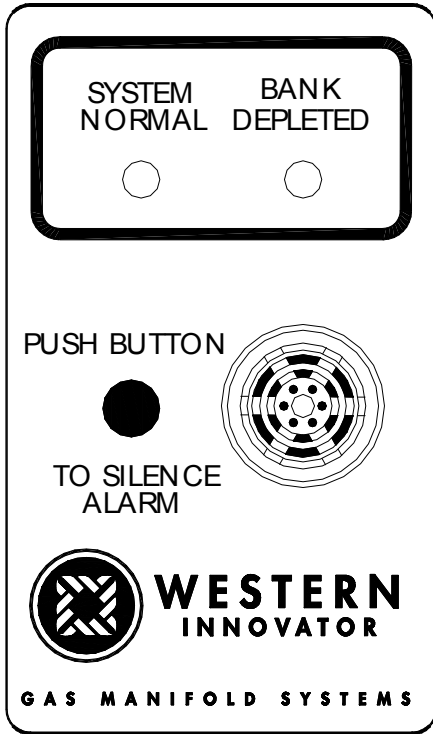

**Features**

- 75 decibel at 100 centimeters buzzer with silence button.
- Exposed or flush mounting.
- Three optional installation configurations.
- Small compact design.

**Specifications**

- Dimensions: 4-3/4”H x 2-9/16”W x 5/8”D
- Power Requirements: 24 VAC, 60Hz
- Current Drain: System normal 80mA  
Alarm condition 70mA

