



Cylinder Wall Brackets


SWB - Series

DESCRIPTION

.All-steel construction bracket with many quality construction features. 11 gauge hot rolled steel. Edges are protected with steel reinforced vinyl edge guarding to maintain and protect your cylinders and provide extra grip. Steel parts are sealed with powder paint. Straps and cinch style buckles support the cylinders. Support straps are 1.5 inch wide by 54 inch long polypropylene with steel cinch buckle rated 1200 PSI. Supports hold cylinders from 4.0 to 12.0 inch diameter. Chain sets (SWB-C-1) are optional and can be easily retrofit.



SWB-1-1

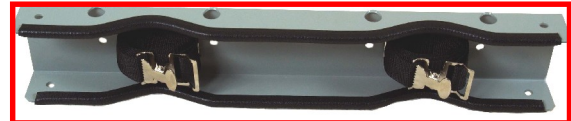

SWB-2-1



SWB-1A-1



SWB-3-1



SWB-4-1

Part Number	Description	Size L x W x H	Weight	Cylinder Capacity
SWB-1-1	Single Cylinder Wall Bracket	2.25" x 8" x 4.25"	3 lb.	1
SWB-1A-1	Single Cylinder Adjustable Bracket, includes chain set	2" x 9" x 5"	3 lb.	1
SWB-2-1	Double Cylinder Wall Bracket	2.25" x 24" x 4.25"	8 lb.	2
SWB-3-1	Triple Cylinder Wall Bracket	2.25" x 36" x 4.25"	11 lb.	3
SWB-4-1	Four Cylinder Wall Bracket	2.25" x 48" x 4.25"	14 lb.	4
SWB-C-1	Chain set, All listed Brackets	41" Long	1 lb.	1
SWB-S-1	Replacement 54" Black Strap Assembly	54" Long	1 lb.	1



SWB-S-1

Cylinder Chains VS Cylinder Straps.

Why do all Western Innovator products offer strap and cinch buckles as standard equipment, and chains sets as an option? Cylinder straps of high strength design cinch a cylinder tightly against a support, while chains must leave the cylinder loose enough to snap the clip. Some local regulations may require chains, however, straps are now widely accepted as primary means of cylinder support. Check with your local regulatory agency.



SWB-C-1

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.